Remote Controller

Signal transmitter

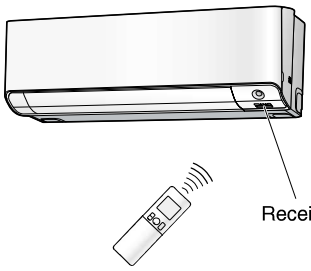

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking the signals between the unit and the remote controller, such as a curtain, the unit may not operate.
- The maximum transmission distance is about 7m.

Display (LCD)

- Displays the current settings. (In this illustration, each section is shown with all its displays on for the purpose of explanation.) **(Explained by ARC466A76)**
- For ARC466A77, the display is as follows:

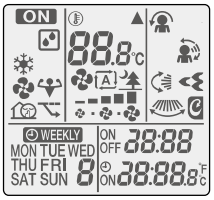

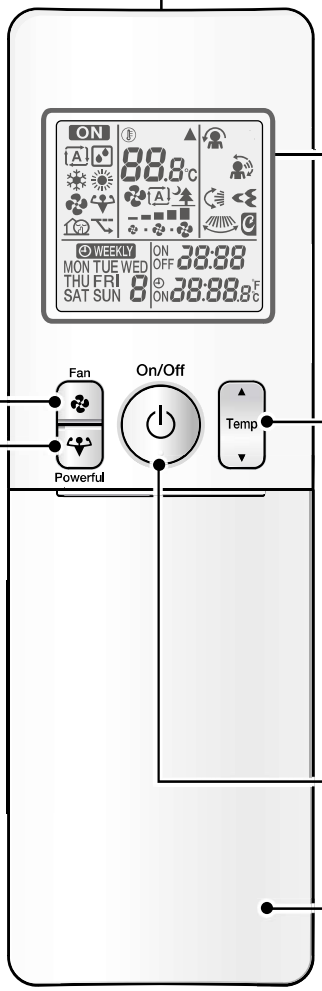

TEMPERATURE adjustment button

- Changes the temperature setting. ▶ Page 14

FAN setting button

- Selects the airflow rate setting. ▶ Page 15

ON/OFF button

- Press this button once to start operation.
  Press once again to stop it. ▶ Page 13

POWERFUL button and Wireless LAN button

POWERFUL button

- POWERFUL operation. ▶ Page 23

Wireless LAN button (push 5 seconds)

- Wireless LAN connection. ▶ Page 35

Front cover

- Open the front cover. ▶ Page 9

For FTXM20/25/35/46	ARC466A76
For FTKM20/25/35/46	ARC466A77

Names of Parts

■ Open the front cover

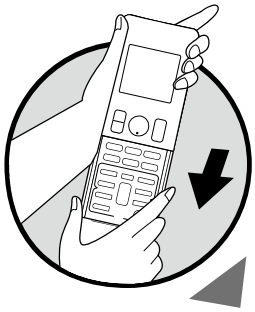

MODE selector button
- Selects the operation mode. (AUTO/DRY/COOL/HEAT/FAN) ▶Page 13

ECONO/QUIET button
- ECONO/OUTDOOR UNIT QUIET operation. ▶Page 24

SENSOR button
- INTELLIGENT EYE operation. ▶Page 21

COMFORT button
- COMFORT AIRFLOW operation. ▶Page 20

OFF TIMER button (NIGHT SET mode) ▶Page 26

TIMER CANCEL button
- Cancels the timer setting. ▶Page 25,26
- Cannot be used for the WEEKLY TIMER operation.

SELECT button
- Changes the clock, ON/OFF TIMER and WEEKLY TIMER settings.

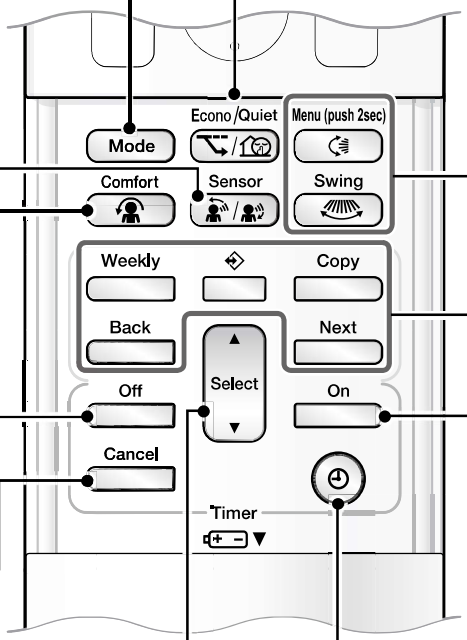

SWING button and MENU button

SWING button
- Adjusts the airflow direction. ▶Page 16

MENU button (push 2 seconds)
- Adjusts the display brightness. ▶Page 12
- MOLD PROOF operation. ▶Page 17,18
- Flash streamer air cleaning operation. ▶Page 19

Weekly **: WEEKLY button**

: PROGRAMME button

Copy **: COPY button**

Back **: BACK button**

Next **: NEXT button**

- WEEKLY TIMER operation. ▶Page 28

ON TIMER button ▶Page 25

CLOCK button ▶Page 11