



Wi-Fi Controller Reset: (Model: GAU-A45HPD with Wi-Fi-HPD Wi-Fi Controller)

Symptoms:


- Wi-Fi Controller shows connectivity, but cannot change settings
- Heat Pump Status remains on Standby
- Wi-Fi status lights are correct but cannot find the Wi-Fi controller when tapping “Add Device”.

Actions:

- Check that Communication setting mode, C_SE is set to **onHP** on internal, Smart Controller
- Remove front cover of Wi-Fi controller, using a Phillips head screwdriver.

NB: Do not use a screw gun / drill as you will overtighten the screws when re-installing the cover.

- Identify “SW1” and flick the 4th switch position to the opposite side. (You do not need to flick it back).



SW1	Function	Operation
4	Reset Wi-Fi	Change the switch to opposite position

- LED display will be Red/Blue/Red




- Open the **Smart Life App** and tap “+” top right corner, then tap “Add Device”:



- App will search for devices, displays the Heat Pump under the “Discovering devices” heading. Tap “Add”.


Searching for nearby devices. Make sure your device has entered pairing mode.




- Enter Wi-Fi Username and Password, then tap “Next”

Enter Wi-Fi Information

Choose Wi-Fi and enter password



- App will confirm device being added, then tap “Done”.

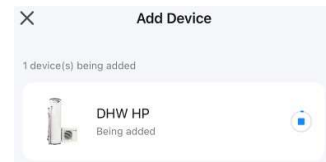

- LED display will be Red/Blue/Green

